




Automatic Sealing Toilet User Manual

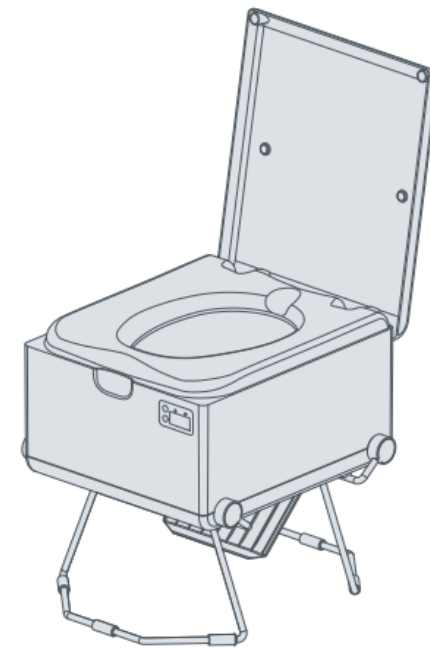

Read the document carefully before the installation and start-up.

Customer After-Sales Service Support

Phone: 1-978-712-8622 (US) | Mon–Fri, 9 AM–6 PM (EST)

Email: zhihongInnovation@outlook.com

Official Website: www.modiwell.net

Table of Contents

Preface1

Packaging List2

Dimensions3

Preparation4

Operation7

Replacing refill bags8

Troubleshooting10

Specifications12

About MODIWELL13

Preface

Product Features:

- 1) **Simple:** one - key operation, even a child can operate it.
- 2) **Hermetic:** both ends of polymer bag are welded by heating to prevent from leaking.
- 3) **Hygienic:** the refill bags wraps and seals the germs, bacteria, viruses and odors.
- 4) **Independent:** no need any connection to water supply and power supply.
- 5) **Mobile:** compact size and lightweight make it possible to be carried anywhere.
- 6) **Sustainable:** eco - friendly film is biodegradable, low energy consumption.

 Warnings:

Built-in battery:

- 1) Charge the battery fully prior to initial use.
- 2) Only use the original charger approved by us to charge the battery.
- 3) DO NOT dismantle or modify the battery pack.
- 4) Switch off the power when toilet is lying idle and not in use.
- 5) It is recommended to charge the battery at least every 3 months.
- 6) Please stop using and switch off the toilet when battery is overheating, and call the distributor.

Proper use:

- 1) Toilet must be placed stably on a flat floor.
- 2) The Max load capacity is 150kgs.
- 3) Keep the surroundings of the toilet free of objects, children and pets during toilet running.
- 4) Any parts of human body DO NOT enter the toilet, because moving parts may cause injuries.
- 5) DO NOT stand or sit on the toilet during toilet running.
- 6) DO NOT throw sharp - edged objects into the toilet.
- 7) DO NOT throw burning or glowing objects into the toilet.
- 8) DO NOT use the toilet in extreme conditions (e.g. extremely hot, cold, humid).
- 9) DO NOT use the toilet without filling or sealing one end of film.

Cleaning and Maintenance:


- 1) Switch off and disconnect the charger before cleaning and maintenance.
- 2) DO NOT clean the toilet with running water or immersing in water.
- 3) Use a soft moist cloth with neutral detergent to clean the toilet. DO NOT use bleach.
- 4) leaning parts: lid, seat, leg and surface of body. DO NOT clean any parts insides.
- 5) Maintenance shall only be carried out by qualified personnel authorized by the distributor or the manufacturer.

Other:

- 1) Use only original film roll and coagulant.
- 2) DO NOT install any additional components or modify the toilet.
- 3) Keep the coagulant away from the reach of children or pets.

Modiwell Toilet LE-310 Series dedicated charger, please do not use this charger to charge other devices.

Packaging List

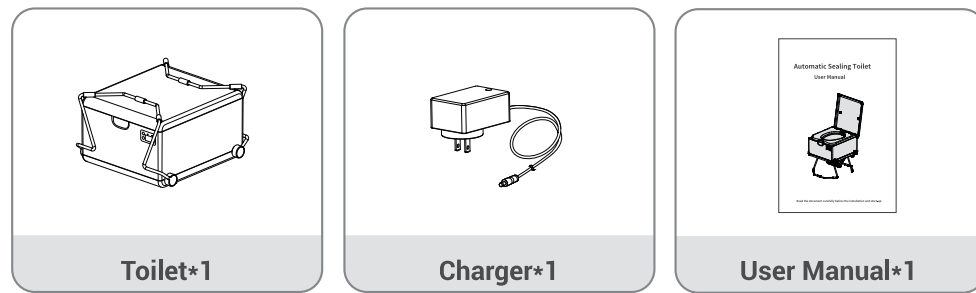

Consumables



Dealing with Damaged/Lost/Supplemented Accessories



- 1. Charger** : Please purchase through Modiwell Amazon official channels.
- 2. User manual** : Contact after-sales customer service to reissue the PDF version or paper version.
- 3. Coagulant** : Please purchase through Modiwell Amazon official channels.
- 4. Refill bags** : Please purchase through Modiwell Amazon official channels.
- 5. Jig** : Reissue through after-sales customer service. The size of the Jig is: length 5.7 inches, width 1.1 inches, thickness 0.07 inches. In an emergency, customers are advised to use similar tools such as cardboard or hard cards (such as bank cards, transportation cards) to temporarily replace the jig.



Customer After-Sales Service Support

Phone: 1-978-712-8622 (US) | Mon–Fri, 9 AM–6 PM (EST)
 Email: zhihongInnovation@outlook.com
 Official Website: www.modiwell.net

Dimensions

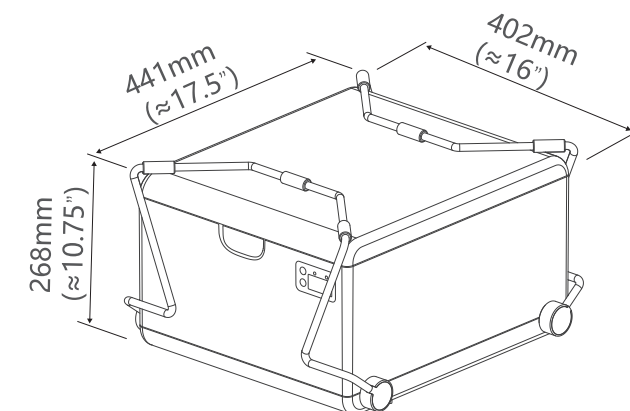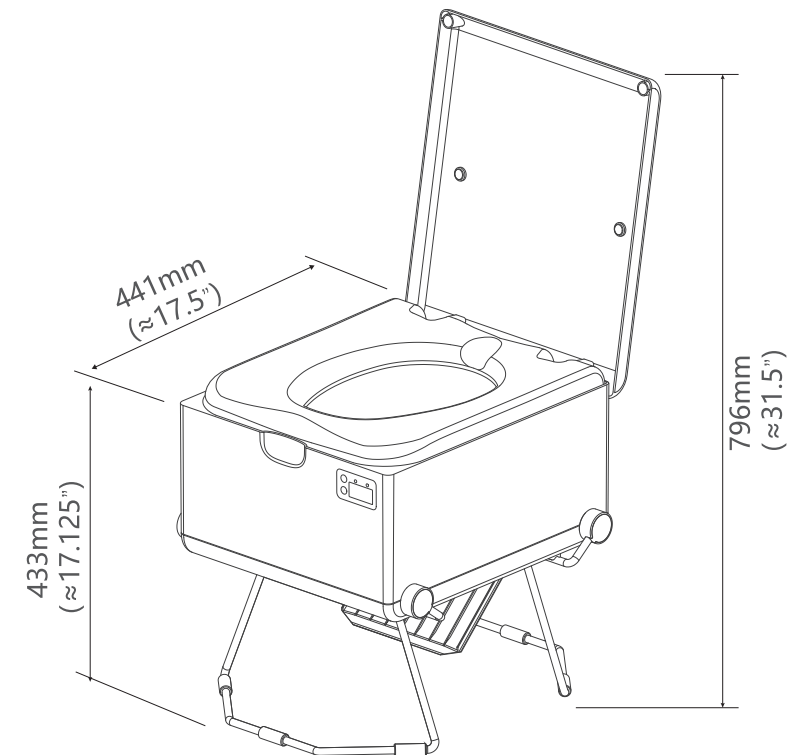


Preparation


Scan the QR code to watch the installation and usage video




- 1 Open and rotate the two toilet legs at both side till they stop and you hear a click. The guide plate opens automatically.

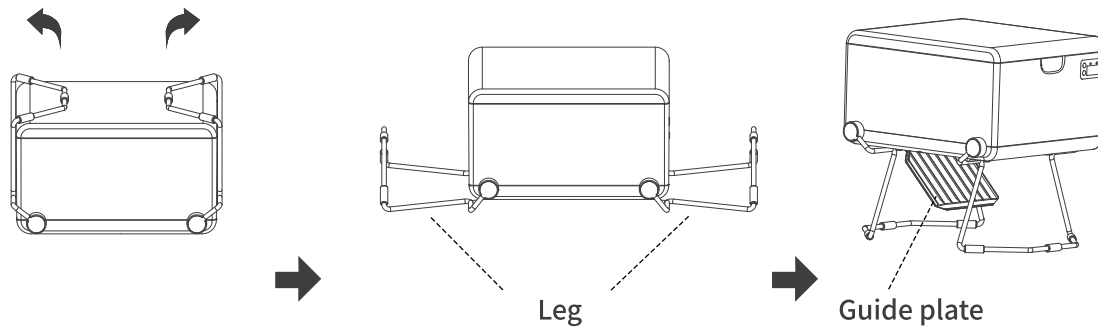

- 2 Use the original charger to charge the toilet. The battery indicator on the control panel flashes while charging the battery, and it indicates steady green light when the battery is fully charged. The number on display means the remaining percentage of power. When the number is lower than 25, please charge it at soonest.

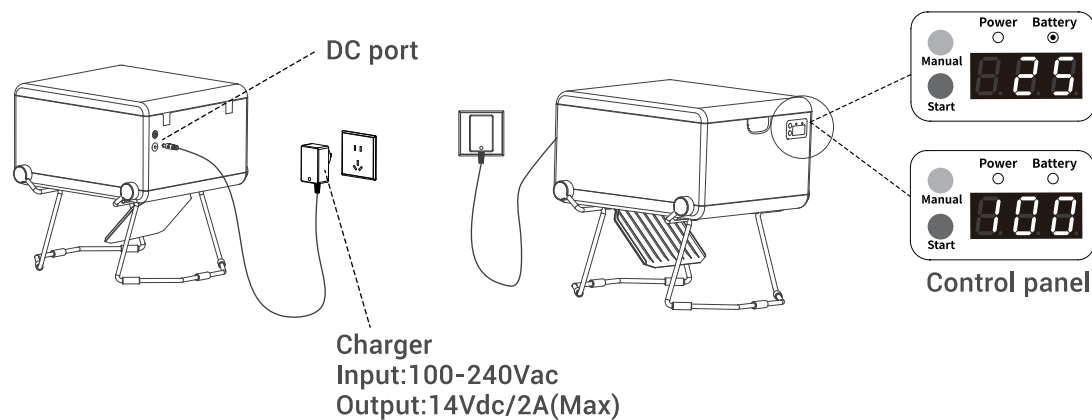


- 3 Open the lid, take the seat and refill bags guide out of the toilet.

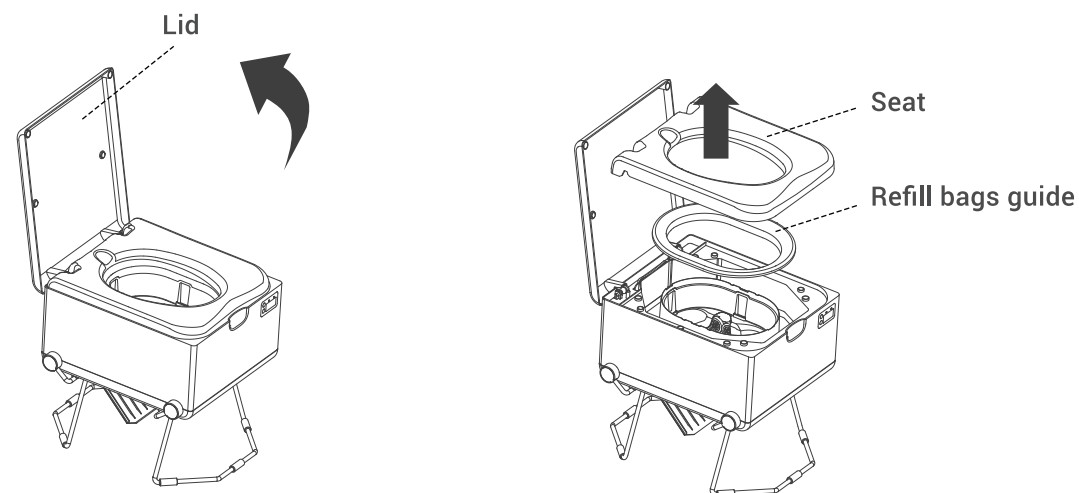


Preparation


- 4 Place the refill bags around refill bags base, and the arrow marks on straps must point upwards.

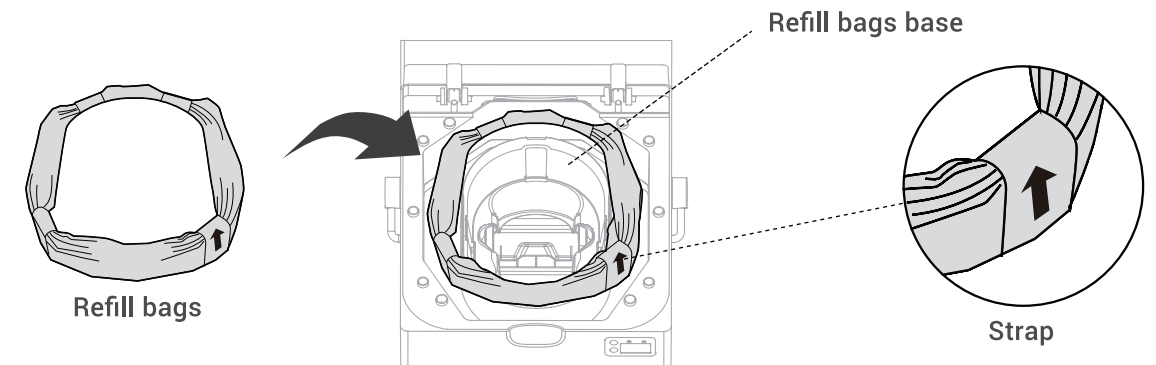

- 5 Remove the four straps, and place the refill bags guide onto the refill bags base.

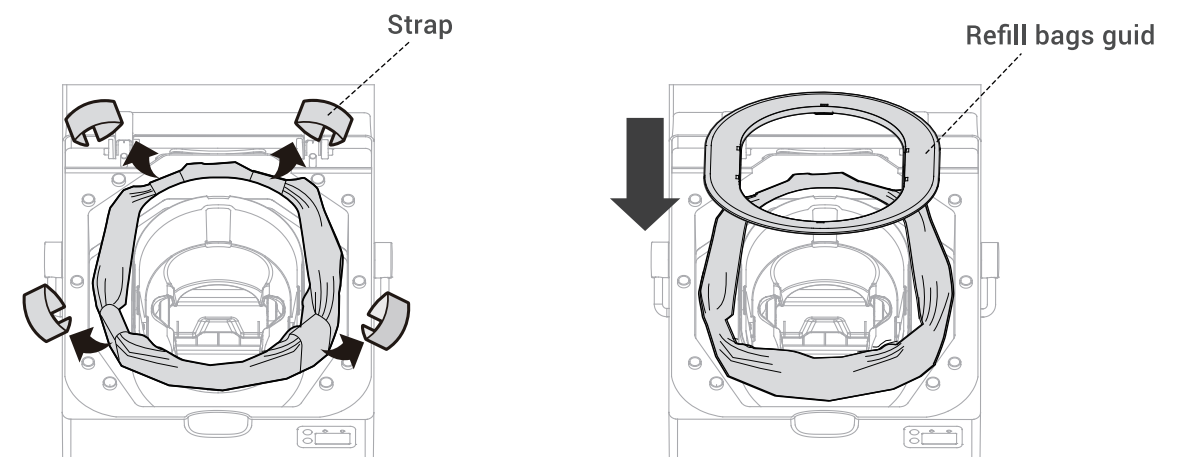


- 6 Pull the refill bags upwards about 20cm (8 inches) from outer edge, then grasp it into a bunch and push it into the toilet. All the processes must be evenly done to avoid the refill bags misaligned feeding.

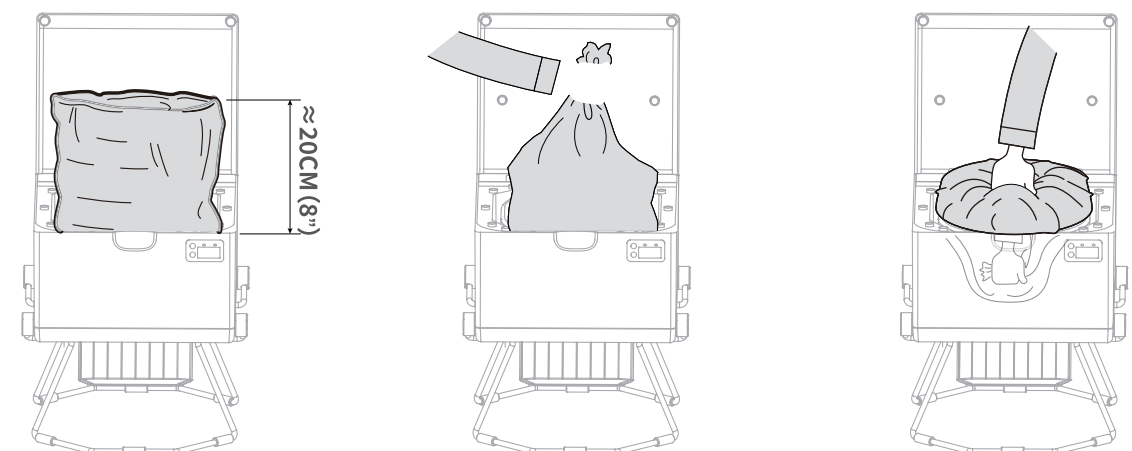


Preparation

- 7 Align the jig with the arrow mark on the body, and push it with the refill bags in between the two rollers at each side at the same time. Take out the jig and place it back in the indentation. Place the seat on the toilet body in correct position.

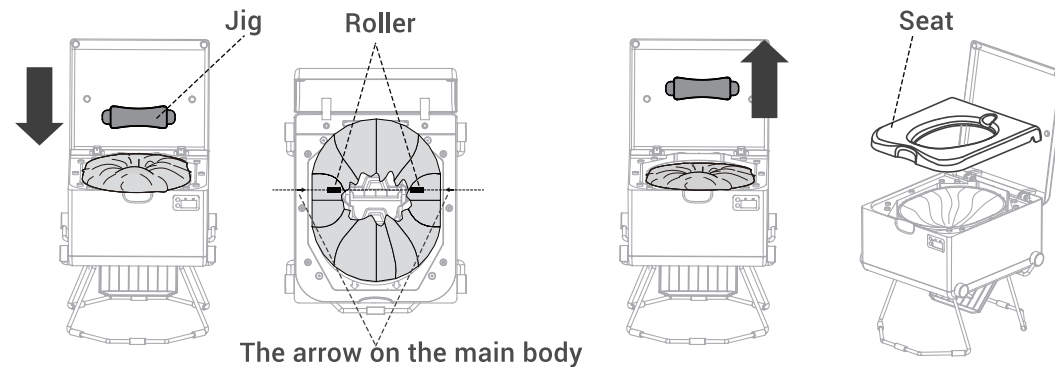


- 8 Press the switch on the back of the body to turn on, and it will start self - test and completes the test when you hear a beep. The toilet is ready for use. The numbers in display window indicate the percentage of remaining battery power. Please charge the battery when it is below 25%.
The system will enter sleep mode if there is no operation within 60 seconds, and can be woken up by pressing any buttons on the panel.

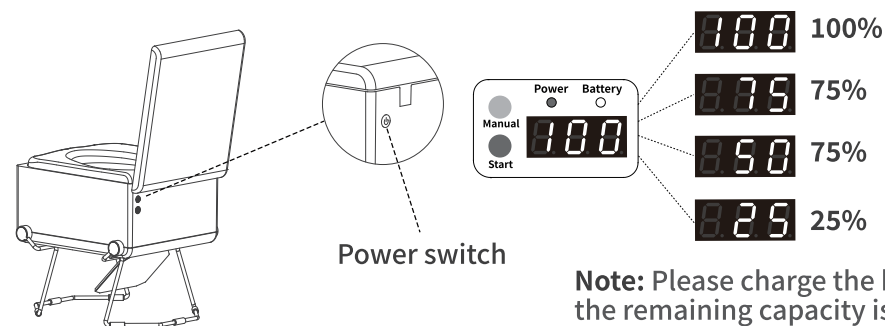

Note: Please charge the battery when the remaining capacity is at 25%.

- 9 Press and hold "Start" button for 2 seconds, and you will hear a beep, then the toilet starts sealing. The numbers in display window are counted down from 100 to 00. You will hear a beep when it reaches 00, and the sealing is completed and the refill bags will fall to floor. Take out the bag and dispose it like baby diaper according to local regulations and rules. The system will enter sleep mode if there is no operation in 5 seconds, and can be woken up by pressing any buttons on the panel.


Note: If you need to seal again, please press the "Starts" or "Manual" button to exit the sleep mode, and then press and hold the "Starts" button to perform the next sealing instruction.

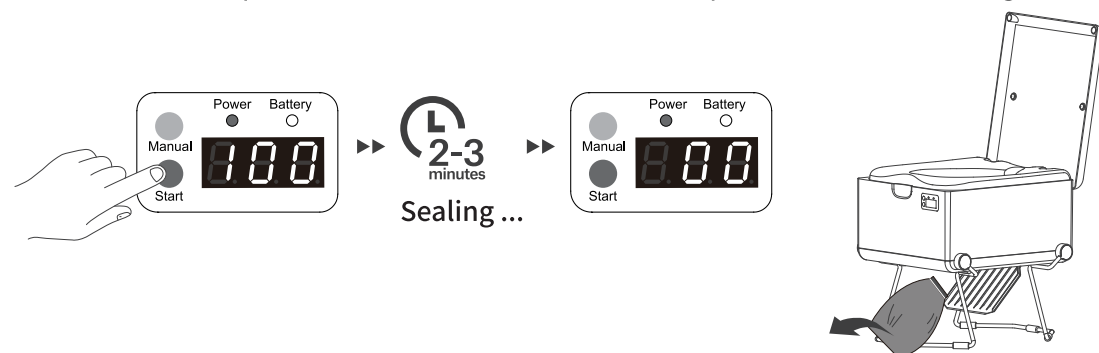

Operation


- 1 Add a bag of coagulant into the toilet before using the toilet.

CAUTION! Health impairment through improper use.
DO NOT swallow the coagulant.
DO NOT allow the coagulant to come into contact with the eyes.
Check the refill bags is installed and the bottom end is welded.
Check the remaining battery power is over 25%.

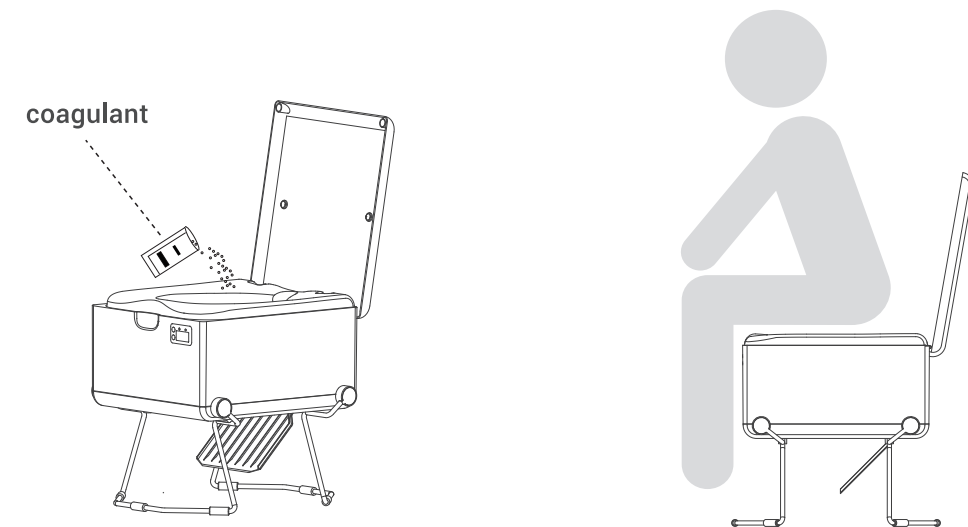


- 2 Press and hold "Start" button for 2 seconds, and you will hear a beep, then the toilet starts sealing. The numbers in display window are counted down from 100 to 00. You will hear a beep when it reaches 00, and the sealing is completed and the refill bags will fall to floor. Take out the bag and dispose it like baby diaper according to local regulations and rules. The system will enter sleep mode if there is no operation in 5 seconds, and can be woken up by pressing any buttons on the panel.

Note: If you need to seal again, please press the "Starts" or "Manual" button to exit the sleep mode, and then press and hold the "Starts" button to perform the next sealing instruction.

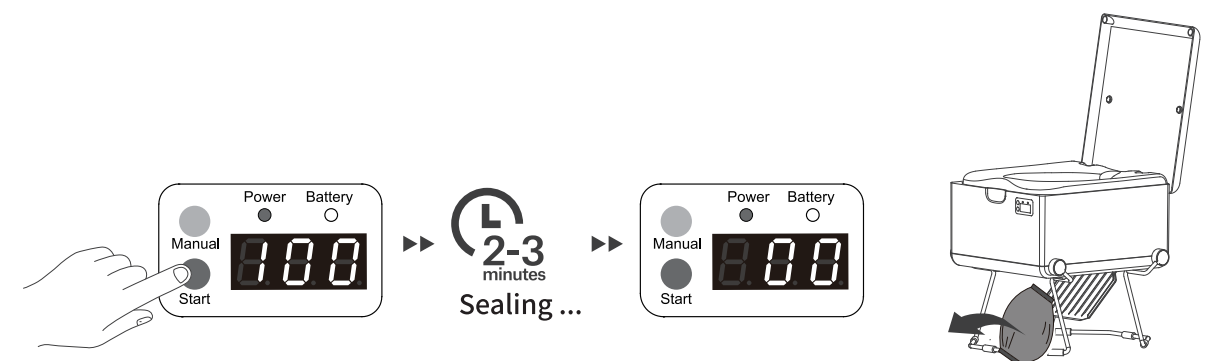


Replacing Refill Bags


- 1 When you see "STOP" on the refill bags in the toilet, it means the refill bags is going to run out, and you should refill a new refill bags right now.
Press and hold "Manual" button on the panel till the refill bags in toilet fully runs out.

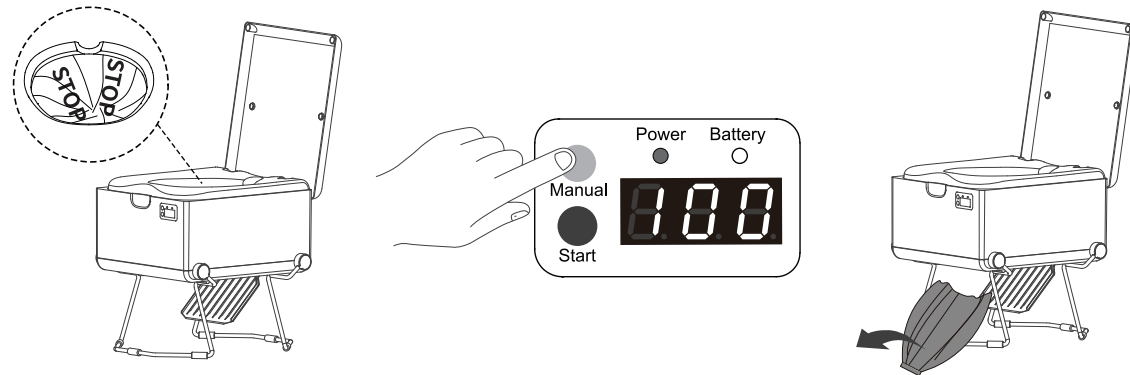

- 2 Take the seat and refill bags guide out of the toilet. Place the refill bags around refill bags base, and the arrow marks on straps must point upwards.

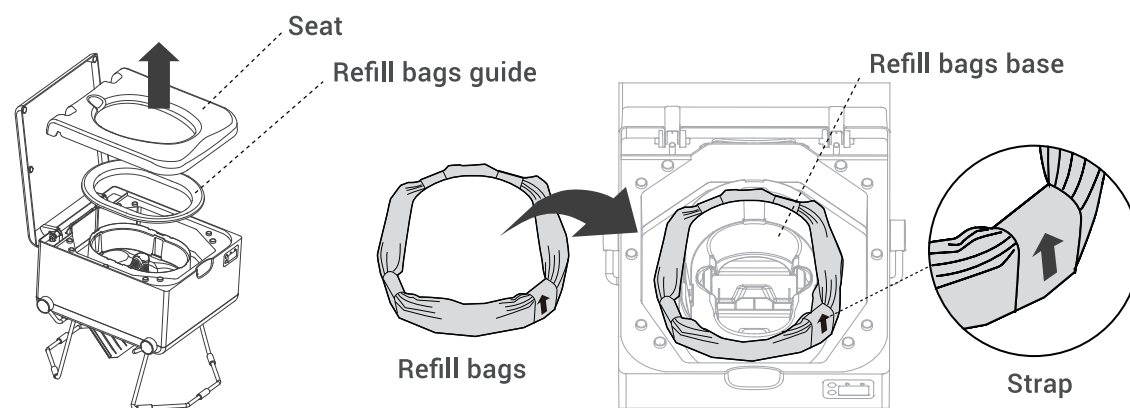


- 3 Remove the four straps, and place the refill bags guide onto the refill bags base.

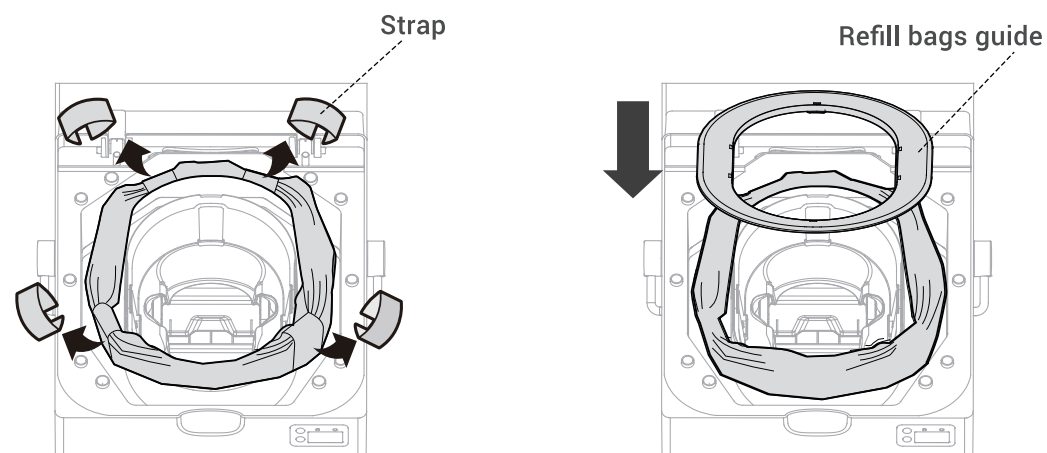


Replacing Refill Bags

- 4 Pull the refill bags upwards about 20cm (8 inches) from outer edge, then grasp it into a bunch and push it into the toilet. All the processes must be evenly done to avoid the refill bags misaligned feeding.

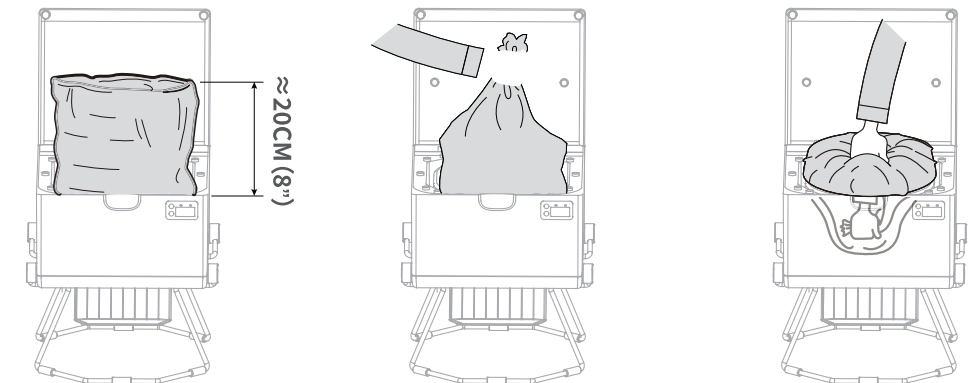


- 5 Align the jig with the arrow mark on the body, and push it with the refill bags in between the two rollers at each side at the same time. Take out the jig and place it back in the indentation. Place the seat on the toilet body in correct position.

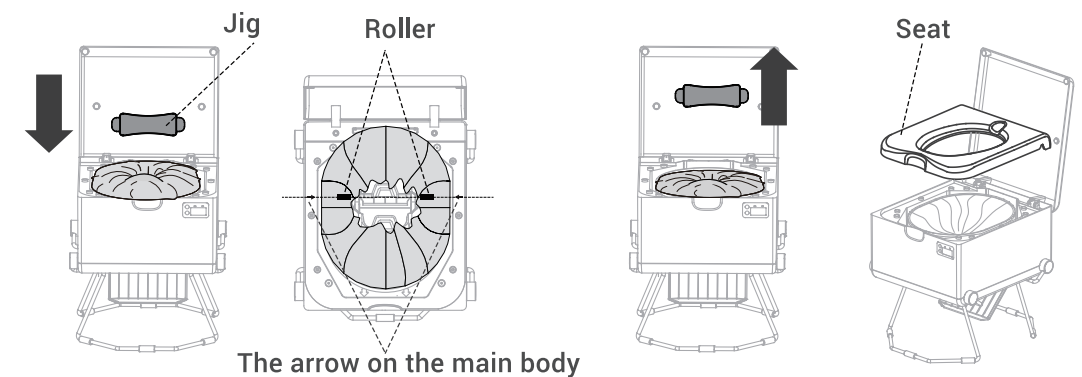

- 6 Press and hold "Start" button for 2 seconds, and you will hear a beep, then the toilet starts sealing. The numbers in display window are counted down from 100 to 00. You will hear a beep when it reaches 00, and the sealing is completed and the polymer bag will fall to floor. Take out the bag and dispose it like baby diaper according to local regulations and rules. The system will enter sleep mode if there is no operation in 5 seconds, and can be woken up by pressing any buttons on the panel.

Note: If you need to seal again, please press the "Starts" or "Manual" button to exit the sleep mode, and then press and hold the "Starts" button to perform the next sealing instruction.

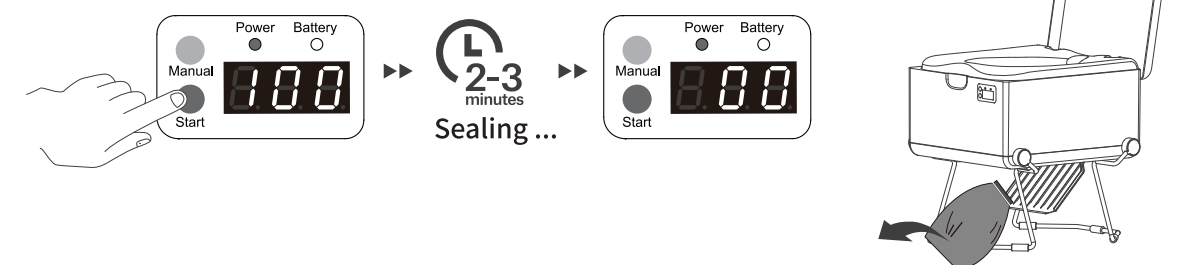

Troubleshooting

Display	Fault		Solutions
	E1	Thermosensor protection	Contact your dealer.
	E2	Heating device protection	Contact your dealer.
	E3	Timer protection There is foreign object in the clamping position.	Remove object and restart it by switching off and on.If the fault persists, please Contact your dealer.
	E4	Overcurrent protection when clamping	Remove object and restart it by switching off and on.If the fault persists, please Contact your dealer.
	E5	Overcurrent protection when declamping	Remove object and restart it by switching off and on.If the fault persists, please Contact your dealer.

For detailed solutions to E4 code, please refer to the guide:
<https://modiwell.net/e4>

Troubleshooting


Fault	Possible Cause	Solutions
Control panel does not light up	Power off.	Press the switch button on the back of toilet.
	Low battery voltage.	Charge the battery.
	Toilet in standby.	Press any button.
	Control panel or toilet is defective.	Contact your dealer.
Fail to charge the battery	Improper charger.	Only use original charger.
Power off while sealing	Low battery voltage.	Charge the battery.
Unstable	Legs are not open fully.	Open legs till you hear a click.
Separation not successful	There is foreign object in the clamping position.	Remove object and restart it by switching off and on.
	Heating or cutting device is defective.	Contact your dealer.
Broken refill bags	/	Press and hold "Manual" button to feed the refill bags till no more holes on in the refill bags. Press "Start" button to seal the refill bags as Preparation Chapter.
The refill bags wraps itself around the rollers	The bags accumulate on the loor and are pulled upwards and in the rollers.	Remove the refill bags from the rollers. Remove the bags on floor. Press "Start" button to seal the refill bags as Preparation Chapter.
Unable to charge	The green light of the charger is not on the charger is damaged	Contact after-sales service customers for processing, or purchase directly from Modiwell Amazon official channels.
	The green light of the charger is on, and the Battery indicator on the toilet panel is not on the built - in battery of the toilet is damaged.	Contact after-sales service customer service

After-Sales Customer Service Support

Phone: 1-978-712-8622 (US) | Mon–Fri, 9 AM–6 PM (EST)
Email: zhihongInnovation@outlook.com
Official Website: www.modiwell.net

Specifications

Model	LE - 310
Color	White、 Silvery、 Grey
Dim(Expanded)	441×402×796 mm (≈17.5" × 16" × 31.5")
Dim(Folded)	441×402×268 mm (≈17.5" × 16" × 10.75")
Dim(Seat)	353×413mm (≈14" × 16.25")
Width(seat)	353mm (≈14")
Weight Limits	150KG (350 lbs)
Height(Seat)	433mm (≈17.625")
Power(Watts)	60W (max)
Charger	Input 100 - 240VAC, Output 14VDC/2A (max)
Capacity	Power Bank 57.72 WH
Net Weight	7.5 KG (16.5 lbs)
Materials	Plastic, Stainless Steel
Operation	0℃ - 40℃ 20% - 80%R
Storage	-20℃ - 60℃ 5% - 95% RH

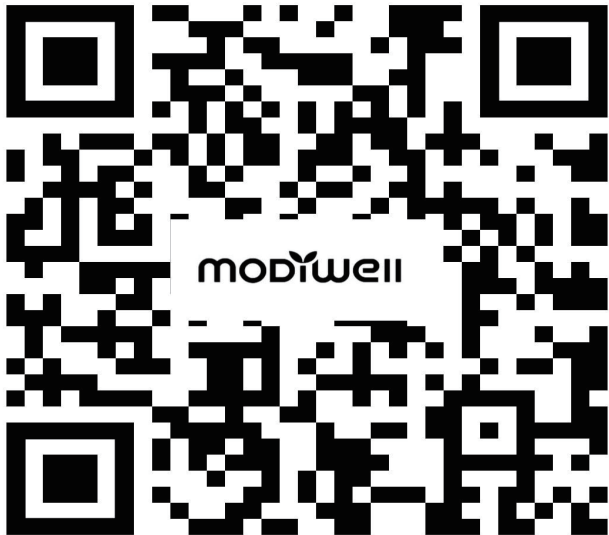

We founded "Modiwell" to completely change people's imagination of portable toilets.
Modiwell = Modify + Wellness

What we bring is not just a portable toilet, but a more comfortable and considerate modern lifestyle.

Modiwell combines smart technology with environmental protection concepts to make every use cleaner, easier and safer.



After-Sales Customer Service Support
Phone: 1-978-712-8622 (US) | Mon–Fri, 9 AM–6 PM (EST)
Email: zhihongInnovation@outlook.com
Official Website: www.modiwell.net